

Crank-Freewheel Removal/Installation Instructions

Removal:

- 1) Remove bolt from right-side crank using socket.
- 2) Remove right-side crank using supplied crank puller. See <http://www.parktool.com/repair/readhowto.asp?id=103> for detailed instructions.
- 3) Remove 4 phillips head screws.
- 4) Remove silver plate.
- 5) Remove 4 Allen bolts. (see diagram)
- 6) Remove retainer clip from spindle.
- 7) Thread supplied bolts into holes in freewheel mechanism. (see diagram)
- 8) Tighten each bolt in small, equal increments to pull freewheel tool from spindle. (see diagram)

Installation:

- 1) Slide New Freewheel onto spindle.
- 2) Replace retainer clip.
- 3) Replace 4 Allen Bolts.
- 4) Replace silver plate.
- 5) Replace 4 Phillips head screws.
- 6) Replace right-side crank. Be sure to orient at 180 degrees to opposite crank.
- 7) Replace crank bolt and tighten. (see Park Crank Removal/Installation Instructions)

Call 1.877.324.5329 if you have any questions.

Insert Supplied Bolts Here

